

Technical data sheet

Modulating spring return actuator with emergency function for adjusting air dampers in ventilation and air conditioning systems in buildings

- For air dampers up to approx. 6 m²
- Torque 30 Nm
- Nominal voltage AC/DC 24 V
- Control: modulating DC 0 ... 10 V
 Position feedback DC 2 ... 10 V
- Two integrated auxiliary switches



Technical data

Electrical data	Nominal voltage	AC 24 V, 50/60 Hz / DC 24 V
	Nominal voltage range	AC 19.2 28.8 V / DC 21.6 28.8 V
	Power consumption In operation	7 W @ nominal torque
	At rest	4.5 W
	For wire sizing	12 VA
	Auxiliary switch	2 x SPDT, 1 mA 3 (0.5) A, AC 250 V 🗆 (1 x fix 10% / 1 x adjustable 10 90%)
	Connection Motor Auxiliary switch	Cable 1 m, 4 x 0.75 mm ² Cable 1 m, 6 x 0.75 mm ²
Functional data	Torque Motor Spring return	Min. 30 Nm @ nominal voltage Min. 30 Nm
	Control Control signal Y Operating range	DC 0 10 V, input impedance 100 k Ω DC 2 10 V
	Position feedback (measuring voltage U)	DC 2 10 V, max. 0.5 mA
	Position accuracy	±5%
	Direction of rotation Motor	Reversible with switch ()/ ()
	Spring return	Can be selected by mounting L / R
	Manual override	With hand crank and interlocking switch
	Angle of rotation	Max. 95°∢, can be limited with
		adjustable mechanical end stop
	Running time Motor	150 s (0 30 Nm)
	Spring return	≤20 s @ –20 50°C / max. 60 s @ –30°C
	Sound power level Motor Spring return	≤45 dB (A) @ 150 s running time ≤71 dB (A)
	Service life	Min. 60,000 emergency positions
	Position indication	Min. 00,000 emergency positions
• • •		
Safety	Protection class	III Extra low voltage UL Class 2 Supply
	Degree of protection	IP54
		NEMA2, UL Enclosure Type 2
	EMC	CE according to 2004/108/EC
	Low-voltage directive	CE according to 2006/95/EC
	Certification	Certified to IEC/EN 60730-1 and IEC/EN 60730-2-14 cULus according to UL 60730-1A and UL 60730-2-14 and CAN/CSA E60730-1:02
	Mode of operation	Туре 1.АА.В
	Rated impulse voltage Actuator	0.8 kV
	Auxiliary switch	2.5 kV
	Control pollution degree	3
	Ambient temperature	–30 +50 °C
	Non-operating temperature	-40 +80°C
	Ambient humidity	95% r.h., non-condensating
	Maintenance	Maintenance-free

Modulating spring return actuator, AC/DC 24 V, 30 Nm, with two auxiliary switches



Dimensions / Weight Dim Weig Safety notes Safety notes	ne actuator is not allowed to be used outside the specified field of application, especially in rcraft or in any other airborne means of transport. may only be installed by suitably trained personnel. Any legal regulations or regulations sued by authorities must be observed during assembly. ne device may only be opened at the manufacturer's site. It does not contain any parts that in be replaced or repaired by the user. ne cables must not be removed from the device. hen calculating the required torque, the specifications supplied by the damper manufacturers ross-section, design, installation site), and the air flow conditions must be observed. ne integrated switches of this actuator have to be connected either to Power supply voltage	
Safety notes Safety notes	ght Approx. 4.4 kg ne actuator is not allowed to be used outside the specified field of application, especially in rcraft or in any other airborne means of transport. may only be installed by suitably trained personnel. Any legal regulations or regulations sued by authorities must be observed during assembly. ne device may only be opened at the manufacturer's site. It does not contain any parts that in be replaced or repaired by the user. ne cables must not be removed from the device. hen calculating the required torque, the specifications supplied by the damper manufacturers ross-section, design, installation site), and the air flow conditions must be observed. ne integrated switches of this actuator have to be connected either to Power supply voltage	
• Th air • Itr iss • Th ca • Th • Wi (cr • Th	rcraft or in any other airborne means of transport. may only be installed by suitably trained personnel. Any legal regulations or regulations sued by authorities must be observed during assembly. ne device may only be opened at the manufacturer's site. It does not contain any parts that in be replaced or repaired by the user. ne cables must not be removed from the device. hen calculating the required torque, the specifications supplied by the damper manufacturers ross-section, design, installation site), and the air flow conditions must be observed. ne integrated switches of this actuator have to be connected either to Power supply voltage	
• Th air • Itr iss • Th ca • Th • Wi (cr • Th	rcraft or in any other airborne means of transport. may only be installed by suitably trained personnel. Any legal regulations or regulations sued by authorities must be observed during assembly. ne device may only be opened at the manufacturer's site. It does not contain any parts that in be replaced or repaired by the user. ne cables must not be removed from the device. hen calculating the required torque, the specifications supplied by the damper manufacturers ross-section, design, installation site), and the air flow conditions must be observed. ne integrated switches of this actuator have to be connected either to Power supply voltage	
∠!\ air • Itr iss • Th ca • Th • Wi (cr • Th	rcraft or in any other airborne means of transport. may only be installed by suitably trained personnel. Any legal regulations or regulations sued by authorities must be observed during assembly. ne device may only be opened at the manufacturer's site. It does not contain any parts that in be replaced or repaired by the user. ne cables must not be removed from the device. hen calculating the required torque, the specifications supplied by the damper manufacturers ross-section, design, installation site), and the air flow conditions must be observed. ne integrated switches of this actuator have to be connected either to Power supply voltage	
iss • Th ca • Th • Wi (cı • Th	sued by authorities must be observed during assembly. The device may only be opened at the manufacturer's site. It does not contain any parts that in be replaced or repaired by the user. The cables must not be removed from the device. Then calculating the required torque, the specifications supplied by the damper manufacturers ross-section, design, installation site), and the air flow conditions must be observed. The integrated switches of this actuator have to be connected either to Power supply voltage	
ca • Th • Wi (cr • Th	In be replaced or repaired by the user. The cables must not be removed from the device. Then calculating the required torque, the specifications supplied by the damper manufacturers ross-section, design, installation site), and the air flow conditions must be observed. The integrated switches of this actuator have to be connected either to Power supply voltage	
• WI (ci • Th	hen calculating the required torque, the specifications supplied by the damper manufacturers ross-section, design, installation site), and the air flow conditions must be observed. The integrated switches of this actuator have to be connected either to Power supply voltage	
cı • Th	ross-section, design, installation site), and the air flow conditions must be observed. ne integrated switches of this actuator have to be connected either to Power supply voltage	
is	safety extra low voltage. The combination Power supply voltage / safety extra low voltage not allowed.	
• Th	he device contains electrical and electronic components and is not allowed to be disposed as household refuse. All locally valid regulations and requirements must be observed.	
Product features		
oper	actuator is controlled with a standard signal of DC 0 10 V and moves the damper to the rating position at the same time as tensioning the return spring. The damper is turned back ne emergency position by spring force if the supply voltage is interrupted.	
	ple direct mounting on the damper spindle with a universal spindle clamp, supplied with an -rotation strap to prevent the actuator from rotating.	
stab This	spindle clamp of the spring-return actuator is equipped ex-works with a spindle stabiliser for bilising the combination of damper, damper spindle and actuator. s is comprised of two plastic support rings and, depending on the installation situation and spindle diameter, must be left in place or partially or completely removed.	
Lon	ig spindle installation: The use of the spindle stabiliser is necessary with long spindle installation with a spindle	
• Th	ameter of 12 to 20 mm. ne use of the spindle stabiliser is not necessary with long spindle installation with a spindle ameter of 21 to 26.7 mm, and it can be removed.	
Important A	ort axis installation:	
be used when the universal mounting bracket is	ne necessity of the spindle stabiliser does not apply with short spindle installation; it can be	
	removed or – if the length of the spindle permits it – left in the spindle clamp. For additional information, see the Installation instructions.	
Manual override Man swit	nual operation of the damper with the hand crank, locking in any position with the interlocking ich.	
Adjustable angle of rotation Adju	ustable angle of rotation with mechanical end stop.	
	The actuator is overload-proof, requires no limit switches and automatically stops when the end stop is reached.	
	actuator has one auxiliary switch with a fixed setting and one adjustable auxiliary switch. y permit a 10% or 10 90% angle of rotation to be signalled.	




Electrical installation

Wiring diagram


/!\

Notes

- Connect via safety isolation transformer.
- · Parallel connection of other actuators possible.
- Note the performance data.

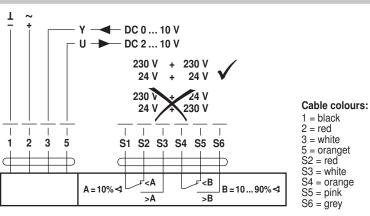


Direction of rotation



Accessories


	Description	Data sheet
Electrical accessories	Range controller SBG24	T2 - SBG24
	Position sensor SGA24, SGE24 and SGF24	T2 - SG24
	Digital position indication ZAD24	T2 - ZAD24
Mechanical accessories	Position indicator IND-EFB	
	Clamp K9-2	
	Crank arm KH-EFB	
	Crank arm adaptor kit ZG-EFB	

Dimensions [mm]

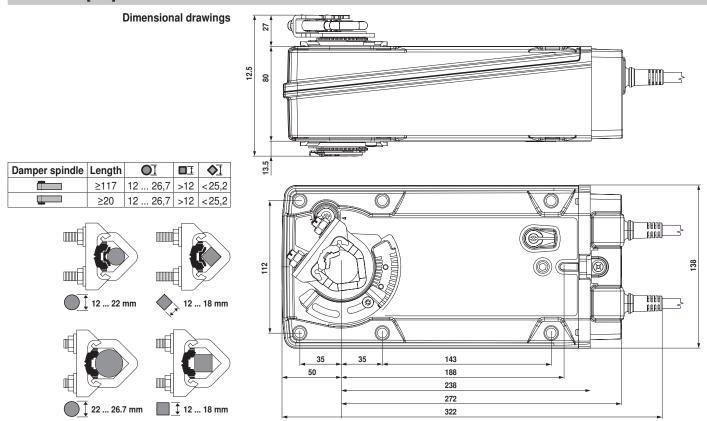





71305-00001.B

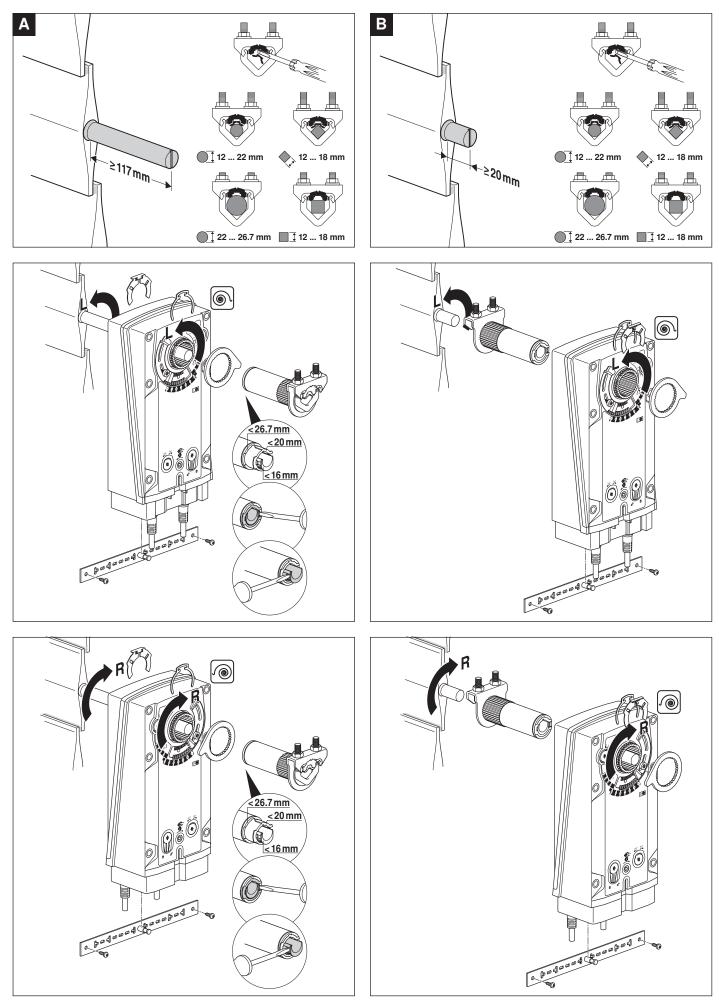






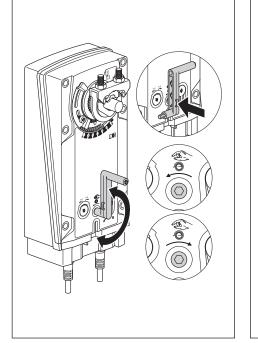

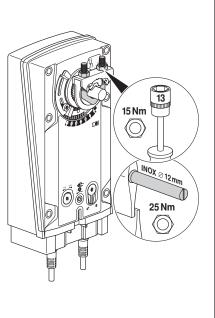

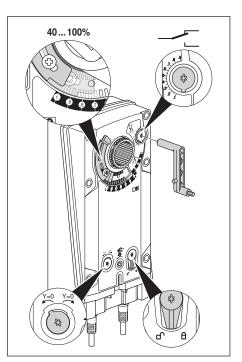

EF..A.. IP 66/NEMA 4



